



The Finest Authentic Decorative Hardware


SINGLE CYLINDER DEADBOLTS

Installation Instructions

0001-10-8190

TOOLS NEEDED FOR INSTALLATION

- Drill • 2 1/8" Drill Bit • 1" Drill Bit
- 3/16" Drill Bit • 5/32" Drill Bit
- Phillips Screwdriver • Chisel
- Allen Wrench (Supplied with Lock)

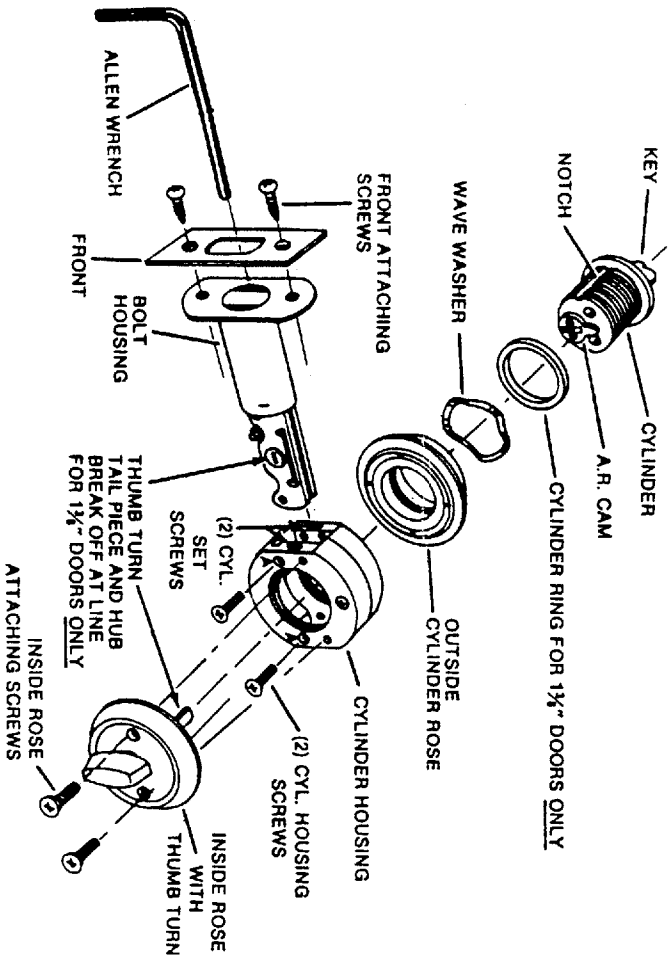

<p>1 MARK HOLES Using enclosed template, mark door as illustrated at desired lock height.</p>	<p>2 BORE TWO HOLES A. Bore 2 1/8" hole until point of drill breaks through. Then complete hole from other side. This prevents splintering. B. Bore 1" hole from edge of door. (See Template)</p>	<p>3 MORTISE FOR FRONT Mortise (recess) for front 5/32" Deep on edge of door. Use front as template.</p>
<p>4 A. Install cylinder housing assembly into large hole in door with "TOP" upright.</p>	<p>5 A. Assemble cylinder and wave washer into cylinder rose.</p>	<p>6 A. Screw cylinder into housing until it stops. (Use key as wrench). B. Reverse rotation of cylinder at least one turn.</p>
<p>7 A. Make sure cylinder lines up on door as shown.</p>	<p>8 A. Assemble front with screws. B. Insert tailpiece into hub with thumb turn in vertical position. C. Secure with machine screws supplied.</p>	<p>9 INSTALL STRIKE REINFORCER AND STRIKE</p>